


# **UPUTSTVO ZA ISKLJUČIVANJE PIN AUTENTIFIKACIJE UREĐAJA ZTE FWA 283**

(SWVer: BD\_ BD\_MF283VV1.0.0B05Temp)

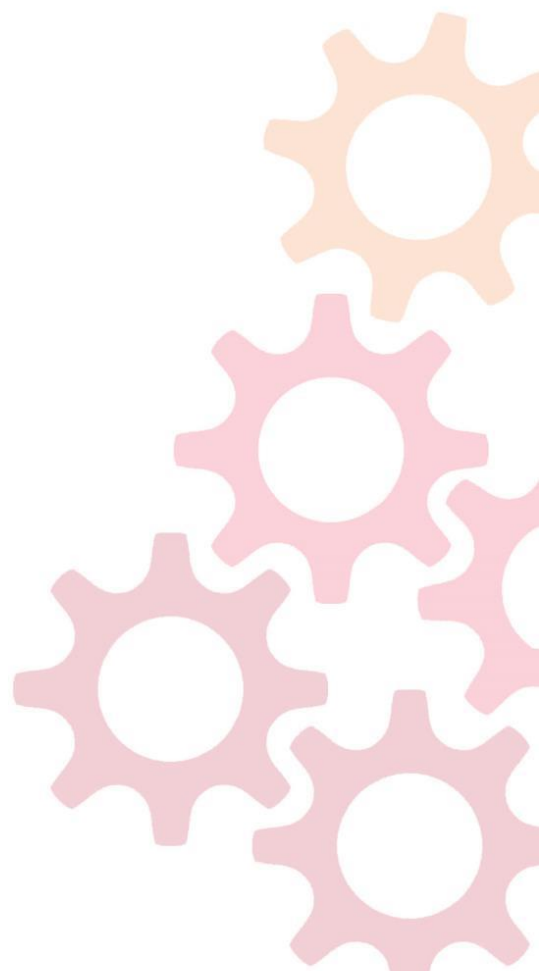


## 1. UKLJUČIVANJE UREĐAJA I OSTVARIVANJE INTERNET PRISTUPA

U predviđeni slot ubacite SIM karticu i uključite ZTE FWA uređaj.


Povežite se na uređaj na željeni način (PC preko Ethernet kabla ili PC/Tablet/Mobilni preko WiFi).

### POVEZIVANJE NA PC PREKO WIFI


Na PC, u prikazanim WiFi mrežama pronađite ZTE uređaj, u predviđeno polje unesite (WLAN NAME (SSID)/WLAN KEY) kao na donjoj slici. Podatak WLAN KEY se nalazi na nalepnici ZTE uređaja.

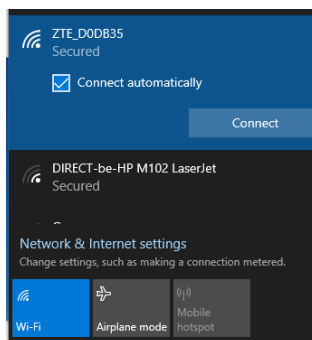



Pristupite Web stranici za upravljanje uređajem preko internet pretraživača povezanog uređaja na adresi <http://192.168.1.1/>.

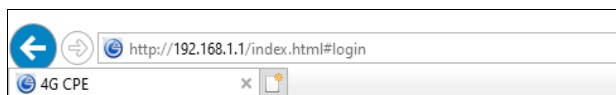


Potvrdite „OK“

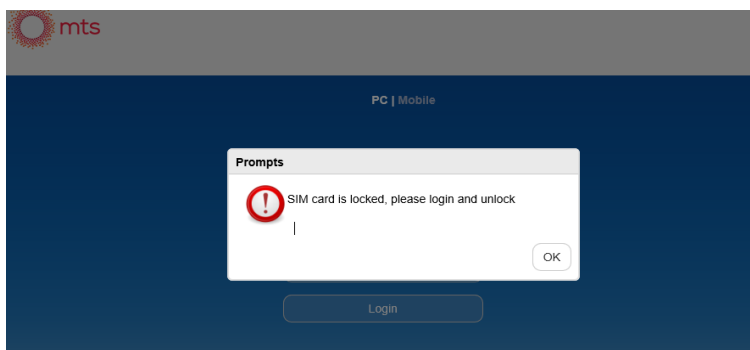


U Log in polja unesite (UserName/Password: telekom/telekom) i potvrdite unos „Login“

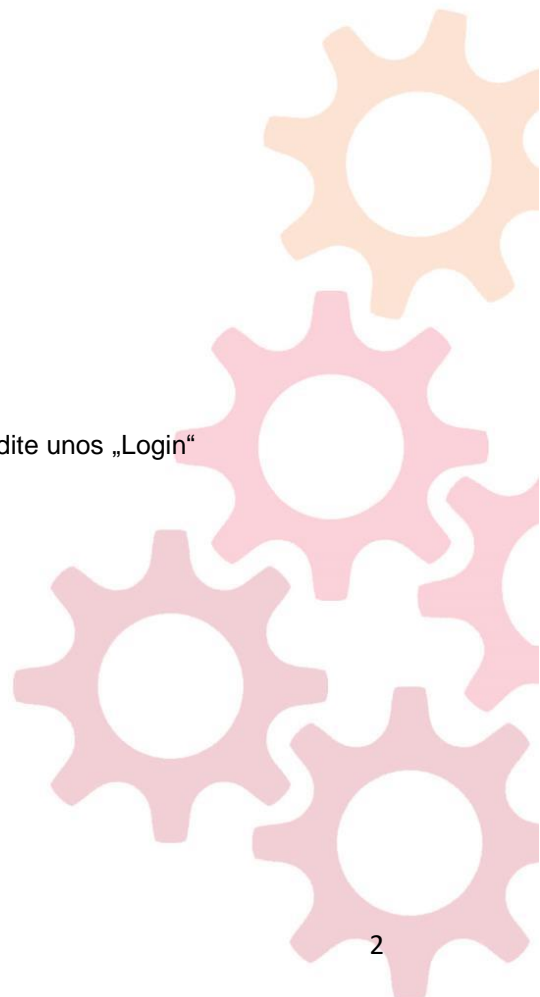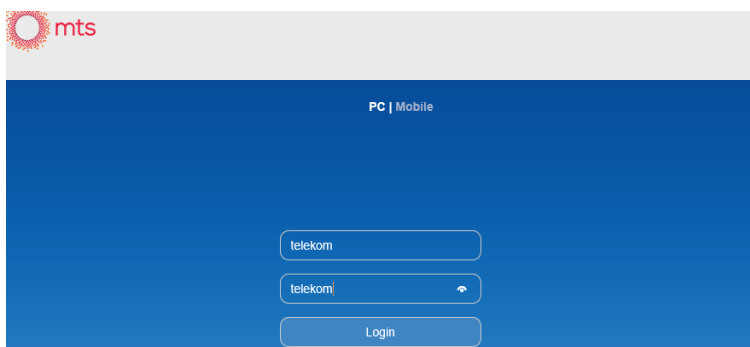


## Odaberite „Agree“

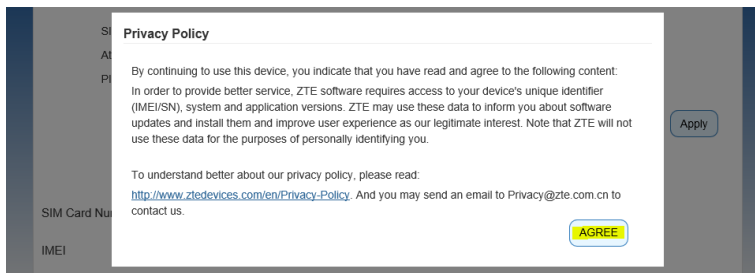



## Odaberite „Apply“ (postoji i mogućnost podešavanje mreže)

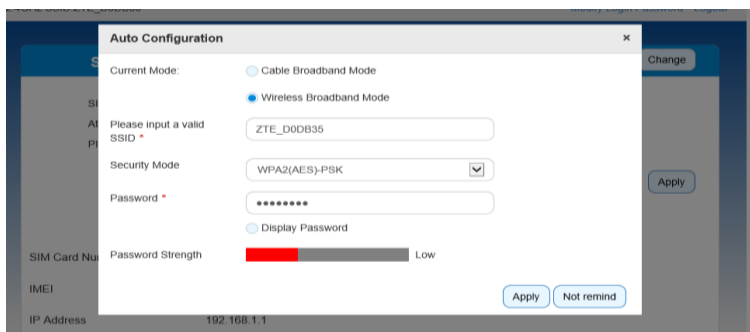

## Unesite PIN (SIM kartice) i odaberite „Apply“

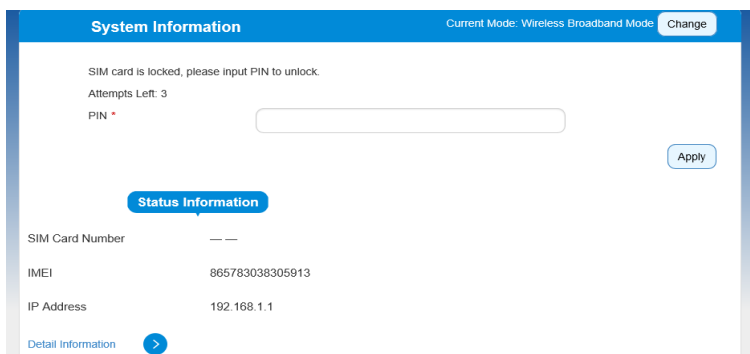


## Pristup Internetu je sada ostvaren

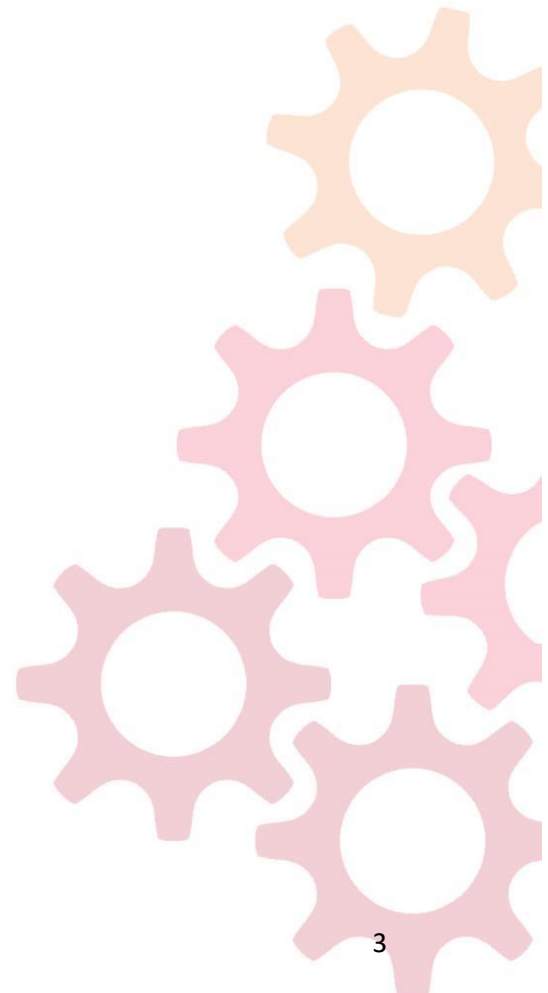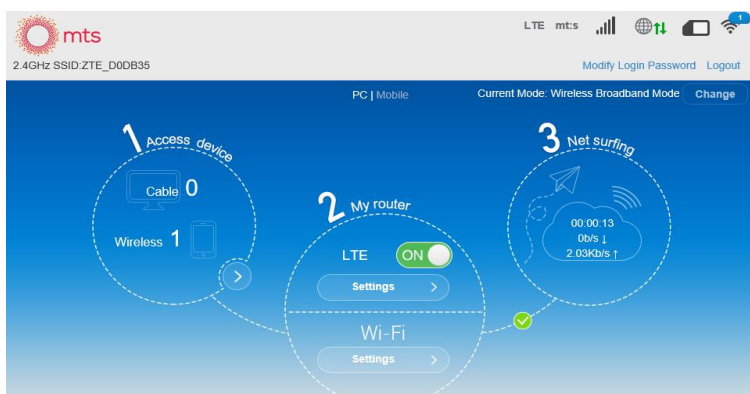


## 2. ISKLJUČIVANJE PIN AUTENTIFIKACIJE


Isključite LTE (ON → OFF)

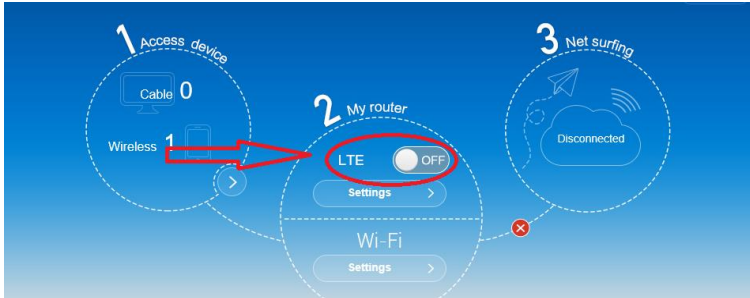


skrolujte na dole i odaberite Advance Settings

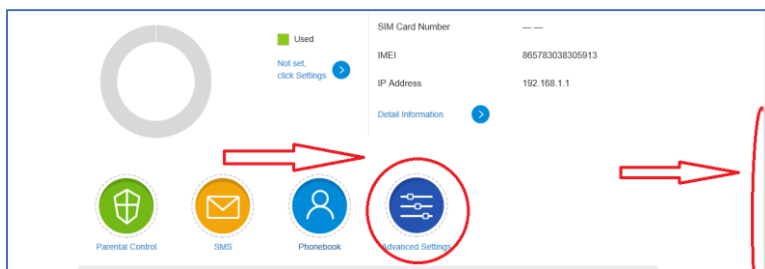



Odaberite Others/PIN Management

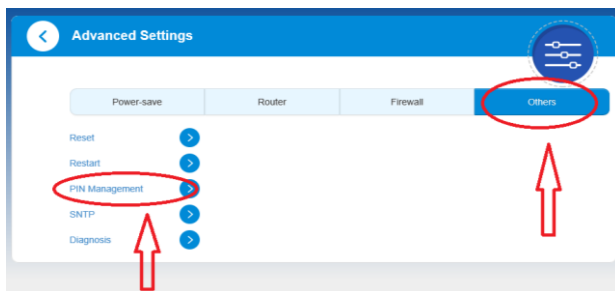

Isključite PIN Status (ON → OFF), unesite PIN SIM kartice i odaberite „Apply“

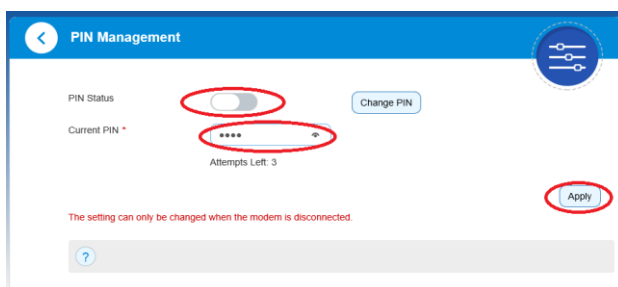


Vratite se u glavni meni i uključite LTE (OFF → ON)

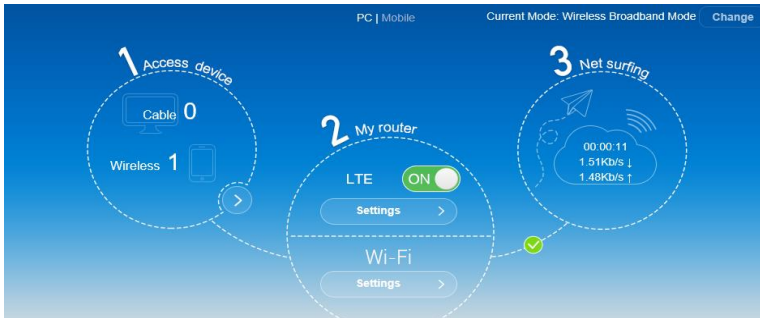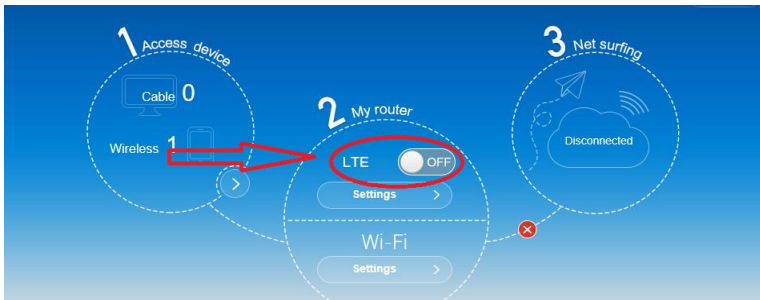

Isključite i ponovo uključite uređaj radi provere.

Posle 1 minuta se ponovo ulogujte unošenjem (UserName/Password: telekom/telekom)

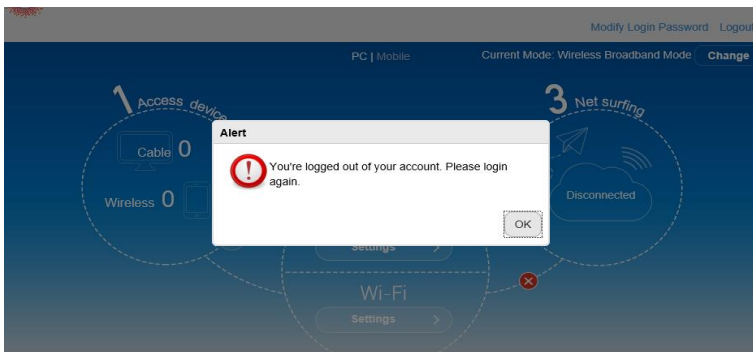

**Internet pristup je sada ostvaren bez zahteva za prethodnom PIN autentifikacijom**

